


EXAKTA

VX 1000



EXAKTA VX 1000

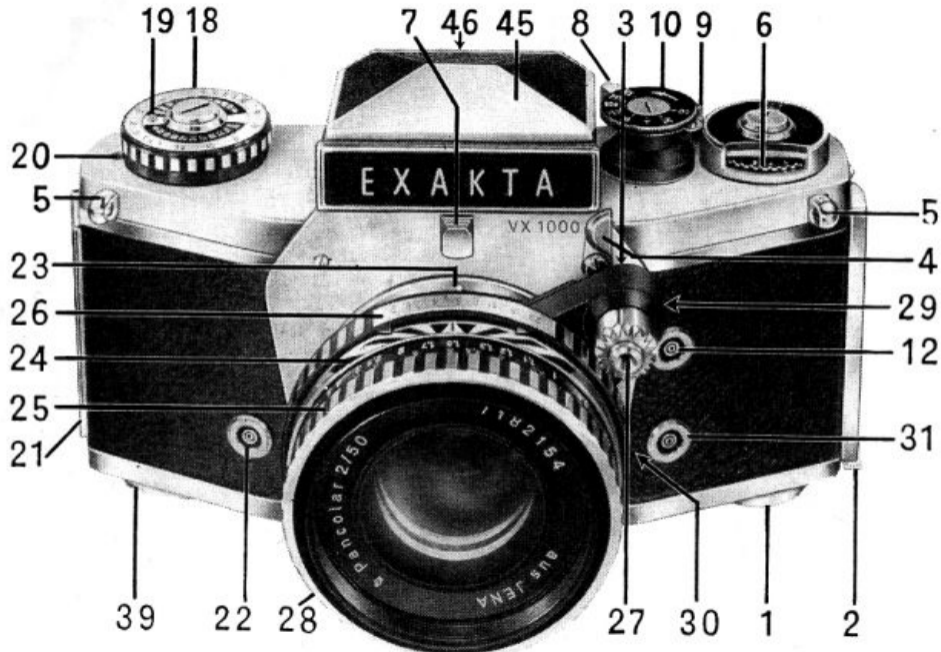

We are delighted that you have chosen an EXAKTA and we wish you every success with your new camera.



We would like to advise you, however, to read this instruction manual carefully before you start using your camera. In this way you will obtain the greatest possible service from it, since you will eliminate from the outset the possibility of operating it incorrectly, and possibly damaging the mechanism. The EXAKTA is a high-quality precision instrument which can naturally only be expected to answer all your requirements when it is always handled correctly.

Fold out the opposite page to the left to reveal

the itemised guide to the camera controls; in this way you can keep constantly referring to this first illustration whilst you are reading the text.

Keep in touch with your photographic dealer so that he can keep you constantly informed about the latest developments in our production range. Naturally, we are always ready to give you any advice and information you may need, whenever you require our assistance on particular points regarding the use of the EXAKTA.

IHAGEE KAMERAWERK AG
in Verwaltung
8016 DRESDEN

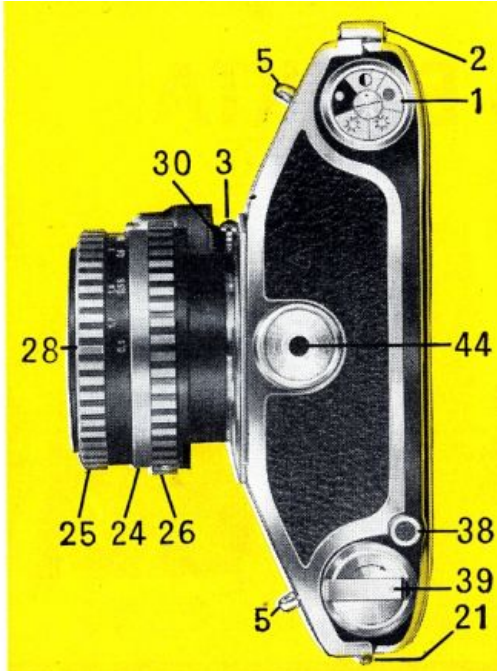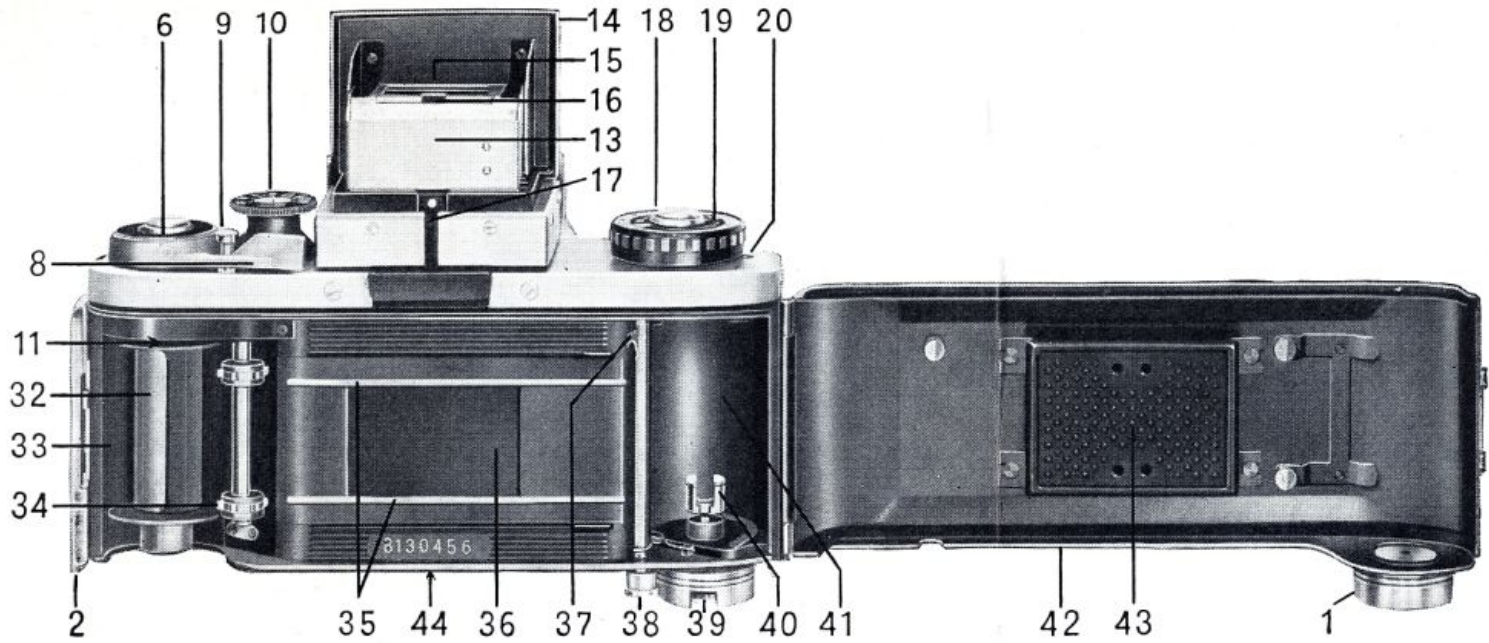



The important operating controls of the EXAKTA VX 1000

- 1 = Knob for opening the camera back with film-type reminder disc
- 2 = Camera-back lock
- 3 = Shutter-release knob
- 4 = Pivoted shutter-release lock
- 5 = Eyelets for carrying strap or cord
- 6 = Frame counter
- 7 = Catch for interchanging the focusing systems
- 8 = Rapid-wind lever for tensioning shutter and advancing film
- 9 = Rewind declutching button
- 10 = Small shutter-speed setting knob (for speeds from $1/30$ sec. to $1/1000$ sec., T and B)
- 11 = Friction dog of rapid-wind lever
- 12 = Flash contact "X" (primarily for electronic flash units)
- 13 = Finder Hood

- 14 = Front of Finder Hood
- 15 = Swing-up focusing magnifier
- 16 = Handle for swinging the focusing magnifier
- 17 = Lever for opening the Finder Hood
- 18 = Large shutter-speed setting knob (for speeds from $1/8$ sec. to 12 seconds and also for delayed action at $1/4$ sec. to 6 seconds)
- 19 = Film-sensitivity reminder disc
- 20 = Indicator disc for checking film advance
- 21 = Camera-back hinge
- 22 = Flash contact "FP" (for flashbulbs)
- 23 = Red aligning dot on camera (for changing lenses)
- 24 = Depth-of-field scale or automatic depth-of-field indicator
- 25 = Distance-setting (focusing) ring
- 26 = Aperture-setting ring
- 27 = Release mechanism for lenses with fully automatic aperture (release knob or release rocker)
- 28 = Lens


- 29 = Red aligning dot on lens (for lens changing)
- 30 = Lens locking lever
- 31 = Flash contact "F" (for flashbulbs)
- 32 = Take-up spool with blue pin
- 33 = Chamber for take-up spool or cassette
- 34 = Film-wind sprocket
- 35 = Film-guide runners
- 36 = Film gate with blind of focal-plane shutter
- 37 = Film-cutting knife
- 38 = Knob of film-cutting knife
- 39 = Rewind crank
- 40 = Dog of rewind crank
- 41 = Chamber for cassette containing unexposed film
- 42 = Non-detachable hinged camera back
- 43 = Exchangeable film-pressure plate
- 44 = Tripod bush
- 45 = Penta Prism
- 46 = Eyepiece of Penta Prism

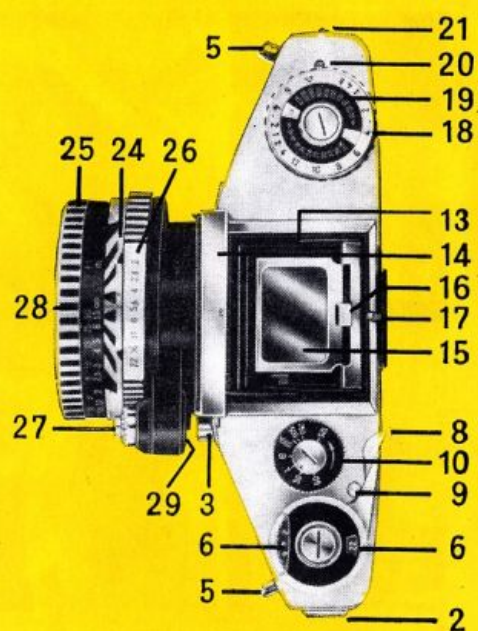

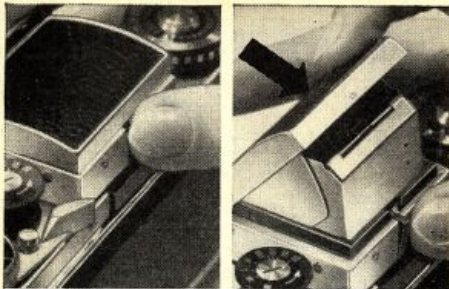

Preparations for use

The Finder Hood (13) is opened by pressing on the lever (17). To close the hood, press the front (14) backwards until it locks. The focusing magnifier (15) can be swung into either the working or rest position by means of handle (16). For further information on the use of the Finder Hood see page 32.

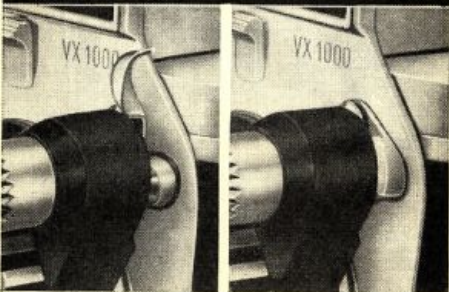

Swing the shutter-release lock (4) out of the way, then release the shutter either by pressing directly on the shutter-release knob (3) or indirectly by depressing the release knob or rocker arm (27) on the lens.


When you have finished taking pictures, swing the shutter-release lock (4) so that it covers the shutter-release knob (3), making shutter release impossible, thus avoiding unintentional exposures.

Film loading


Loading and changing the film must not take place in direct sunlight! The EXAKTA VX 1000 uses standard 35 mm miniature film, in cassettes of 20 or 36 exposures, to make negatives 24 mm x 36 mm. Perfect film transport requires faultless film cassettes. Daylight loading spools should only be inserted in cassettes made by the same manufacturers.

1. Depress camera-back lock (2) downwards. Open hinged camera back.



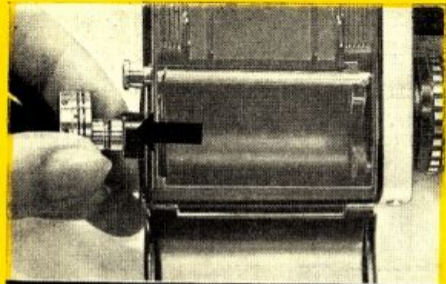


2. Pull out the rewind crank (39) by means of its knob.

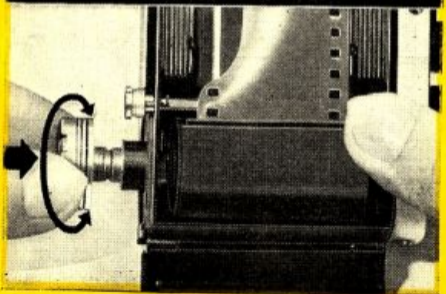



3. Insert the cassette containing the unexposed film in the feed chamber (41). Push the knob of the rewind crank back into the camera body, twisting the knob gently in either direction to engage the dog (40) with the bar in the cassette core.

4. Remove the take-up spool (32) from the chamber (33). Push the beginning of the film under the clamping spring of the take-up spool and wrap one half turn round the core of the spool.

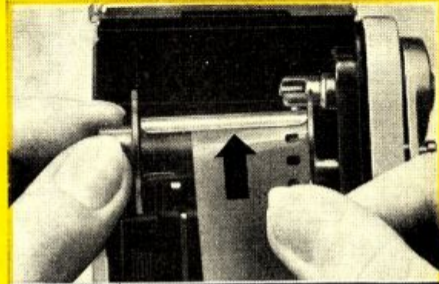


5. Replace the take-up spool (32) in the film chamber (33) and turn it slightly in the wind-on direction so that the friction dog (11) of the rapid-wind lever couples with the bar inside the spool core and allows the spool to be pushed right home into the chamber (33).

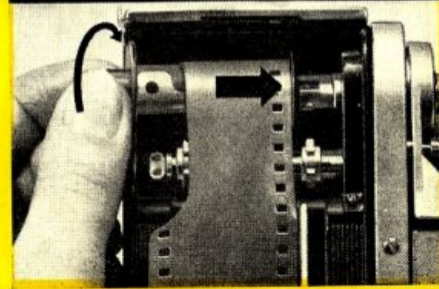

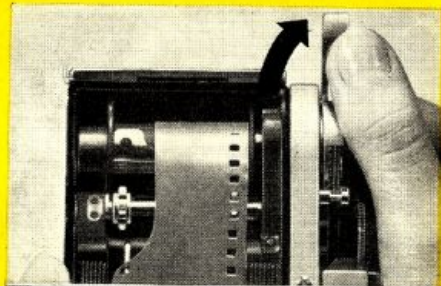


6. Swing the rapid-wind lever (8) right up to its stop (if necessary first releasing the shutter). These two processes may have to be repeated until the teeth of the film-wind sprocket (34) engage with the perforation holes on both sides of the film.

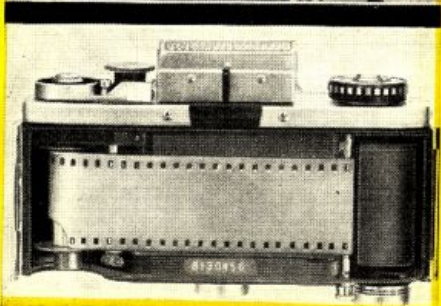


7. The correctly inserted film runs from the full cassette as tightly as possible over the film-guide runners (35) into the somewhat deeper lying film track and over the film-wind sprocket (34) on to the take-up spool (32).


8. Closing the camera: This should be done by pressing the back lightly home until an audible click is heard.

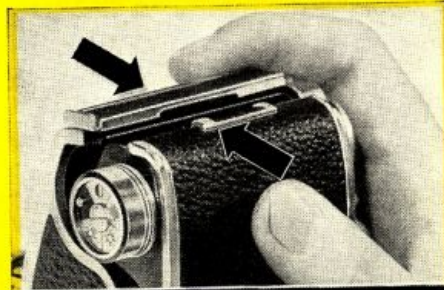

2X


9. Expose two blank frames to wind on the fogged leader-length at the beginning of the film: release and swing the rapid-wind lever (8) as far as it will go. Once again: release and swing the rapid-wind lever (8) as far as it will go.

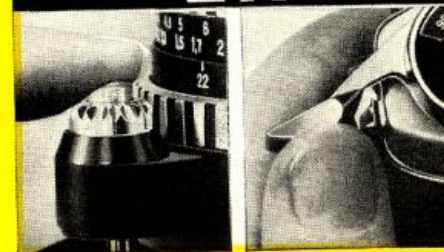

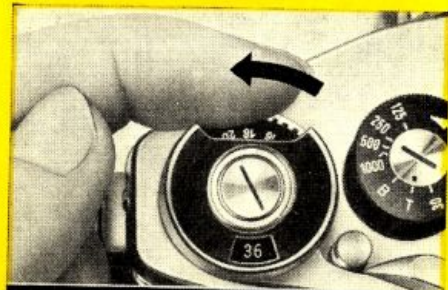

10. Setting frame counter (6). Turn the disc of the frame counter (6) with the index finger to the left (anti-clockwise), until, when using a film with 36 exposures the figure "36", or when using a film with 20 exposures the figure "20" appears in the centre of the window.


The EXAKTAVX1000 is now ready for action, and the frame counter will indicate after each exposure the number of unexposed frames still left on the film in the camera. To check the film transport observe indicator disc (20): the disc with its red mark rotates, when the spool of the film-feeding cassette is revolving.

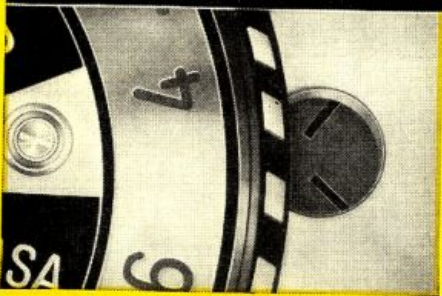



11. When film is loaded, immediately set the film-type reminder disc in the back-opening knob (1) and the film-sensitivity reminder disc (19) as a reminder of the type of film that is in the camera.

Both discs may be turned in either direction, until the appropriate reference is opposite the red dot, or, in the case of the film-sensitivity disc, opposite the black triangle. The film-type symbols have the following meaning:

- = black-and-white film
- (with red dot) = universal colour film, for daylight and artificial light
- ☀ = colour film for daylight
- ☀ (with red dot) = colour film for artificial light


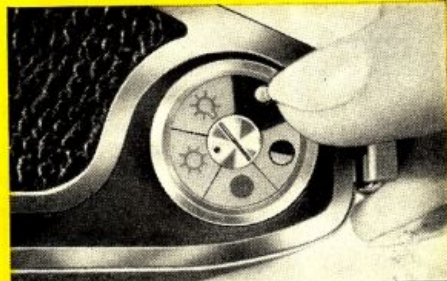


Example above: setting for colour film in daylight
Example below: film sensitivity 18 DIN

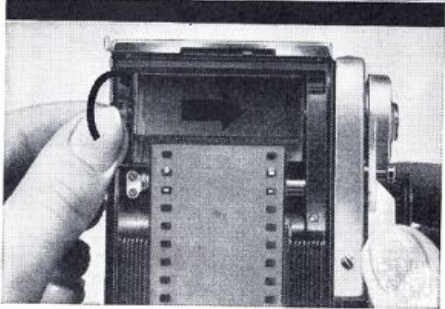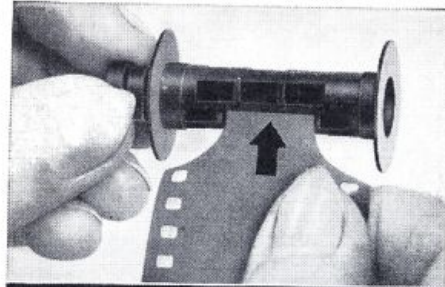


Using a take-up cassette

In place of the take-up spool (32), an empty standard-type film cassette may be placed in the take-up chamber (33). Take care to check the condition of this take-up cassette thoroughly: the core should move easily within the shell of the cassette and must not jam (if necessary the friction point of the cassette core may be lubricated by rubbing them with paraffin wax). When using a take-up cassette proceed as follows: attach the leader tongue of the film to the core of the cassette spool, ensuring that the bar in the core of the spool is on the right as the spool is turned away from the body, and insert the cassette so that the friction dog (11) of the rapid-wind lever (8) engages with the bar in the core of the spool. Then check that the film is pulled taut between the two cassettes, and is lying correctly between the guides, against the register rails in the deeper channel.

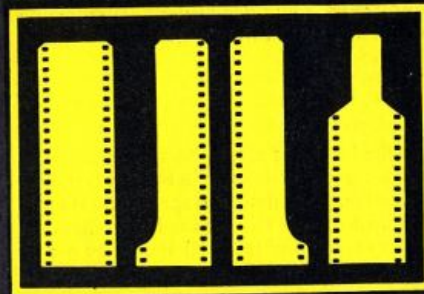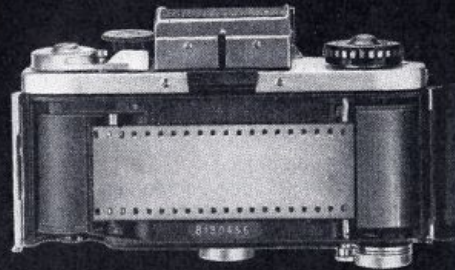

It is not necessary to trim the beginning of the film specially. Any shape of leader can be used with the take-up spool of the EXAKTA VX 1000, either the narrow tongue provided on standard commercial cassettes, or, even better, a straight cut-across end as obtained when cutting lengths of film from bulk rolls. When employing a take-up cassette the film must be trimmed to suit the core of the cassette spool.

For changing film, refer to page 39.

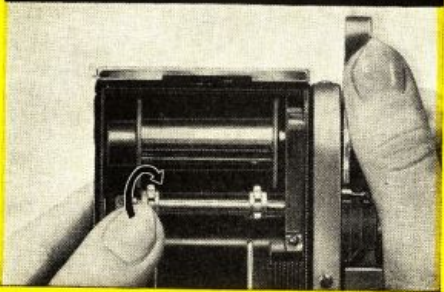

Operating the shutter

1. The shutter is tensioned and the film wound on by operating the rapid-wind lever (8). This lever should always be swung right up to its stop, and will then spring back of its own accord. (The fast returning lever should be restrained gently with the thumb.)


The tensioning of the shutter and the transportation of the film are coupled (avoiding unintentional double exposures and blank frames). It is impossible to release the shutter before it has been fully tensioned and the film wound on. Never force the rapid-wind lever back from any intermediate point in its travel.

Should the lever not spring back automatically when the camera is empty, the back (42) should be opened and the film-wind sprocket (34) turned a little towards the exposed-film chamber (33). The rapid-wind lever (8) should be gently nudged during this operation.


2. The reflex image in the viewfinder (Finder Hood, Penta Prism or Lens Magnifier) will be visible even after the shutter has been released. (Instant return mirror.) The red warning signal in the reflex image indicates that the camera is not yet ready for action, and that the rapid-wind lever (8) must be cocked before the shutter is ready for release (see illustration: reflex image seen through Penta Prism).

3. Shutter speeds from $1/1000$ sec. to $1/30$ sec. can safely be employed without the use of a tripod. For exposure times of $1/8$ sec. and longer, including delayed action exposures, the camera should be firmly supported (on a table, against a wall) or on a tripod. The tripod socket (44) is situated underneath the EXAKTA VX 1000.



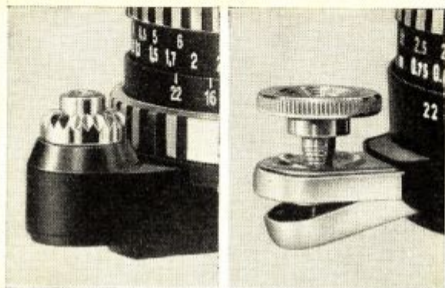


For all exposure times of $\frac{1}{8}$ sec. or longer, or exposures using the delayed action, lenses having automatic diaphragms should be set to manual in order to avoid premature opening of the aperture. When using the Domiplan 2.8/50 lens, a cable release with a long plunger and time-exposure lock, or the special locking knob (available as an accessory) should be employed for the release rocker. For more information regarding this, see the detailed description of lenses on pages 26-29.

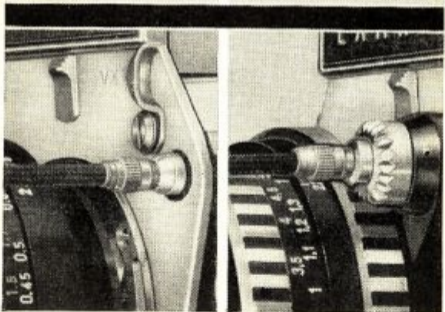


Cable releases (with long plunger) may be screwed into the shutter release knob (3) on the camera or into the release mechanism on the lens (27). This is particularly important when using shutter speeds of $\frac{1}{8}$ second and slower, and virtually indispensable when employing the B setting. See page 19.

Selection of exposure times from $\frac{1}{1000}$ sec. to $\frac{1}{30}$ sec. (without delayed action)
Lift the small shutter-speed setting knob (10), turn it in the direction of the arrow until the desired speed value is opposite the setting dot on the central disc and then allow the knob (10) to spring back. This operation may be performed either before or after tensioning the shutter.

The figures represent fractions of seconds: for example $30 = \frac{1}{30}$ sec, $125 = \frac{1}{125}$ sec. Intermediate speeds cannot be set.

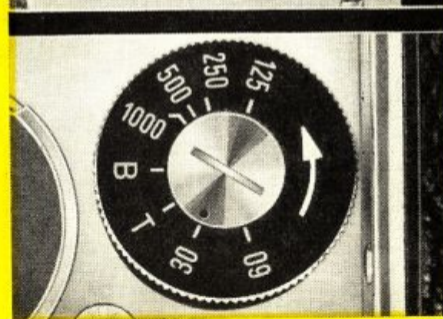

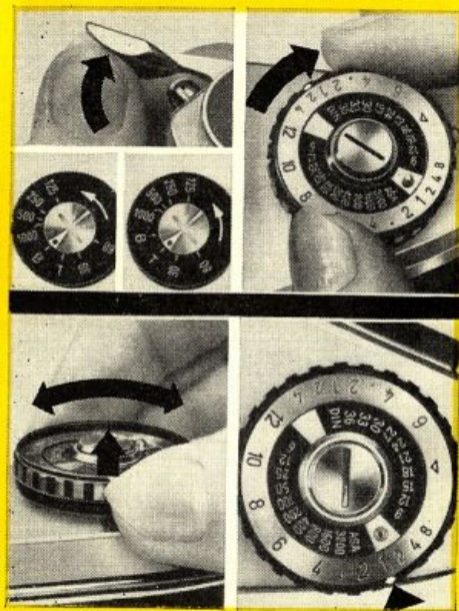


Shutter speeds from $\frac{1}{8}$ sec. to 12 sec. (without delayed action)

Read also the instructions of page 16! Tension the shutter. Set the small shutter-speed setting knob (10) to T or B. Turn the large shutter-speed setting knob (18) in a clockwise direction until it stops; this tensions the speed-regulating mechanism. Then lift the outer ring of the shutter-speed setting knob (18), turn it until the yellow mark is opposite the desired **black** speed value and then let the outer ring spring back. The small figures 8, 4 and 2 signify fractions of seconds, e. g. $\frac{1}{8}$, $\frac{1}{4}$ and $\frac{1}{2}$ sec. The larger figures from 1 to 12 represent whole seconds (3 seconds is represented by a dot).¹ After a fairly brief exposure (e. g. $\frac{1}{8}$ sec.) has been used, the speed-regulating mechanism will be only slightly run down; despite this, it should always be wound right up by turning the knob as far as it will go.

Time exposures of any desired length (without delayed action)

Read also the instructions on page 16! Select T or B on the small shutter speed knob (10) by lifting the knob and rotating it in the direction of the arrow until the required setting (B or T) is opposite the red dot on the centre disc. Then allow the knob (10) to spring back.

B: the shutter will remain open so long as pressure is maintained upon the shutter-release knob (3) or on the release mechanism of the lens. T: the shutter will open when the release knob (3) or the release mechanism on the lens is operated and will close again upon a second pressure. The B and T settings are very important for taking night and indoor exposures.

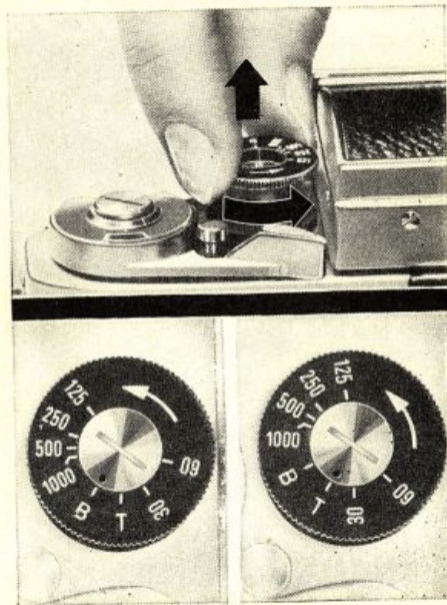




Intentional double exposures

With the EXAKTA VX 1000, it is not possible for unintentional double exposures to occur. It is, however, possible to take double exposures on purpose (e. g. for trick photography). After the first exposure, the shutter can be re-tensioned without winding on the film as follows: turn the small shutter-speed setting knob (10) as far as it will travel in the direction of the arrow, without lifting it; the knob should be held to prevent it from springing back.

Operating the lens

1. The aperture value (f/No) is selected by means of the aperture-setting ring (26). Turn this ring until the desired f/No on the aperture scale is opposite the mark. For instructions on operating the diaphragm mechanism, see the sections dealing with the various lenses on page 26 onwards.

The smaller aperture numbers, e. g. f 2, 2.8, 4, indicate relatively large diaphragm openings: these permit brief exposures, but give only shallow depth of field. The larger aperture numbers, e. g. 16, 22, indicate relatively small diaphragm openings requiring longer exposure times, but giving great depth of field. Further information on the depth of field will be found on page 25.

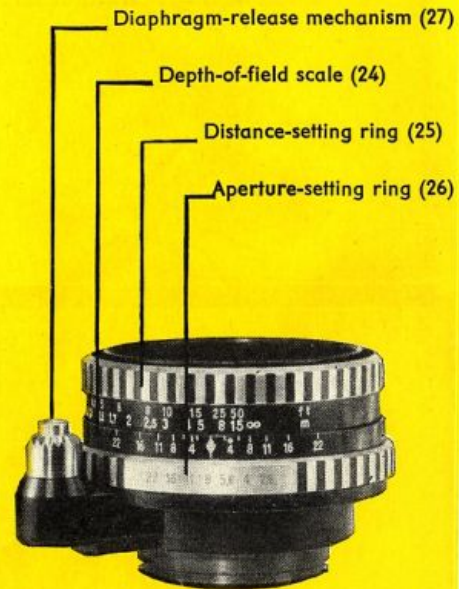



2. The lens is focused by turning the distance-setting ring (25) and observing the definition of the reflex image in the viewfinder. The lower values on the distance scale indicate metres, whilst the larger values above them represent feet. All distances are measured from the back of the camera to the subject. When the image of the subject in the reflex viewfinder attains its sharpest definition, then the correct camera-subject distance in feet or metres will be in line with the red setting mark. For further information on using the fresnel lens (with micro-prism field) see page 36.

When focusing the reflex image use the maximum aperture of the lens (i. e. smallest f/No) to obtain the most brilliant image, and then stop down just before the exposure. It is not necessary to take the camera from your eye, since all the lenses are equipped with fully-automatic spring or pressure diaphragms. For more detailed information see the descriptions of the lenses on page 26 onwards.


Reading off the depth of field

When the depth of field is great, objects at widely varying distances from the camera will form a sharp image. The precise extent of this sharp zone will be indicated (after focusing) by the depth-of-field scale (24) on the lens: on either side of the red distance-setting mark you can read off from the distance scale where the depth-of-field zone begins and ends for any specific aperture setting. If the relevant f/No. on one side of the central distance-setting mark is in line with the infinity symbol (∞), or even beyond it, then the depth of field will extend right up to infinity. On the right are two examples and a photograph demonstrating large depth of field.

Above: Distance setting 2 metres ($6\frac{1}{2}$ ft), aperture f 5.6 = depth of field extends from 1.7 m ($5\frac{1}{2}$ ft) to 2.5 m ($8\frac{1}{2}$ ft)

Below: Distance setting 4 metres (13 ft), aperture f 16 = depth of field extends from 2 metres ($6\frac{1}{2}$ ft) to infinity (∞)

The Pancolar 2/50 mm lens from Jena has an automatic depth-of-field indicator; see page 29.

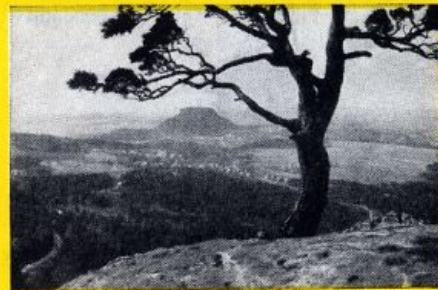


Focusing for infra-red pictures

When using infra-red film, first focus the reflex image normally, then note the distance indicated by the red setting mark (either in feet or metres, or the infinity symbol), and turn the focusing ring to set this distance against the red dot (infra-red setting mark) which is either to the right or the left of the normal setting mark. By doing this the image produced by the invisible infra-red rays, which lies at greater distance from the lens than the image formed by visible light, will be brought into sharp focus in the film plane of the camera and consequently will appear sharp in the negative.





Fully-automatic pressure diaphragm on Domiplan 2.8/50 lens: Always open the diaphragm fully for focusing. Pre-select the required smaller aperture (larger f/No) by turning the aperture setting ring (26); intermediate settings between the marked f/numbers can also be selected. By depressing the release rocker (27), the lens will stop down automatically; when the pressure on the rocker is relaxed, the diaphragm re-opens automatically. The release rocker should therefore be held down until the shutter has closed. To check the depth of field when focusing, the release rocker (27) may be depressed part way so that the diaphragm closes down without releasing the shutter.

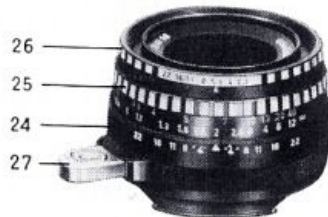

In order to avoid premature opening of the aperture, for longer exposures, both when using the large shutter-speed setting knob (18) and when employing the B and T settings on the small speed-setting knob (10), and also for all delayed-action exposures, either of the following procedures should be adopted: Screw a cable release with a long plunger and time-exposure lock into the release rocker. In this way pressure can be maintained on the release rocker or body-shutter release for any desired period without having to keep one's finger constantly on the release (also eliminating camera shake).




Alternatively, a special locking knob (available as an accessory) can be screwed into the release rocker; by propping up the lower part of the rocker the automatic diaphragm mechanism will be disengaged. The lens is then stopped-down (i. e. a numerically-larger aperture value is selected) by turning the aperture-setting ring. The lens opening will remain stopped-down according to the extent to which the ring is rotated.

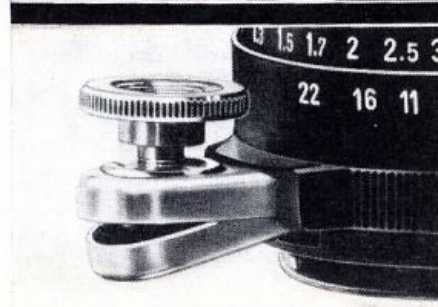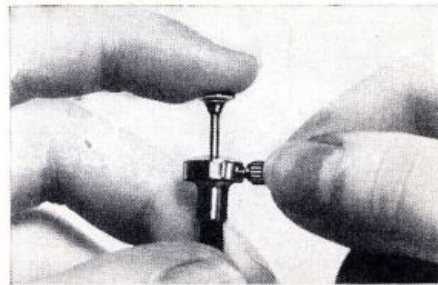



Fully automatic spring diaphragm on T 2.8/50 from Jena and Pancolar 2/50 lenses from Jena

Engage the automatic diaphragm mechanism by pushing the release knob (27) on the lens towards the camera together with its mount and turn it to the right (viewed from the front of the camera). To disengage the automatic diaphragm, press the release knob (27) together with its mount towards the camera and turn it to the left (again looking from the front). When the automatic mechanism is disengaged (= manual diaphragm setting), the diaphragm will remain stopped down to the selected f/No (this is important when using slow shutter speeds and delayed-action exposures). When the automatic mechanism is engaged, the diaphragm should be fully opened for focusing. Select the required smaller aperture (larger f/number) by turning the aperture-setting ring (26), which can also be set to intermediate stops. By depressing the lens-release knob (27) the diaphragm is stopped down automatically; by letting go of the release knob (27) the diaphragm re-opens automati-

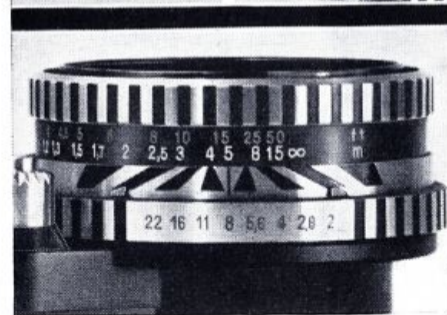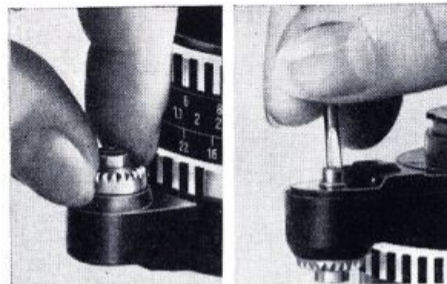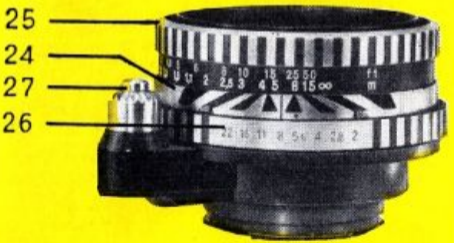

cally. Pressure on the release knob (27) should not be relaxed until the shutter has closed. To check the depth of field whilst focusing, depress the lens-release knob (27) just far enough to stop down the lens as required without releasing the shutter. In order to ensure that the shutter-release knob (3) on the camera body is always depressed far enough to trigger the shutter, the setscrew on the release mechanism of the lens should be adjusted to the required length with a screwdriver. A cable release with a long plunger can be screwed into the lens-release knob (27).

Automatic depth-of-field indicator on the Pancolar 2/50 lens: After setting the aperture and distance, follow the appropriate black/white bands from the two movable black markers to the distance scale, upon which the depth-of-field range can be read off. Example: aperture setting f 8, distance 5 metres (17 ft) = depth of field from barely 3 metres (10 ft) to over 15 metres (actually 23 metres or 76 feet).



Special-purpose lenses for the EXAKTA VX 1000

| Designation, speed and focal length in mm | Type of aperture*) | Angle of view (horizontal) | Front mount for screw-in and push-on accessories |
|--|--------------------|----------------------------|--|
| Flektogon 4/20 | FSD | 93° | M 77 × 0.75, 80 mm Ø |
| Lydith 3.5/30 | PSD | 71° | M 49 × 0.75, 51 mm Ø |
| Flektogon 2.8/35**) | FSD | 62° | M 49 × 0.75, 51 mm Ø |
| B 1.5/75 from Jena | PSD | 32° | M 58 × 0.75, 60 mm Ø |
| Orestor 2.8/100 | CSD | 25° | M 49 × 0.75, 51 mm Ø |
| Orestor 2.8/135 | PSD | 18° | M 55 × 0.75, 57 mm Ø |
| S 4/135**) | FSD | 18.5° | M 49 × 0.75, 51 mm Ø |
| S 2.8/180 from Jena | FSD | 14° | M 86 × 1 90 mm Ø |
| Orestegor 4/200 | PSD | 12° | M 58 × 0.75, 60 mm Ø |
| Orestegor 4/300 | PSD | 8° | M 95 × 1 100 mm Ø |
| S 4/300 from Jena | FSD | 8° | M 86 × 1 90 mm Ø |
| Orestegor 5.6/500 | PSD | 5° | M 118 × 1 125 mm Ø |
| Catoptric (mirror) lens 4/500 from Jena | no diaphragm | 5° | built-in filter turret |
| Catoptric (mirror) lens 5.6/1000 from Jena | no diaphragm | 2.5° | built-in filter turret |

- *) CSD = Click-Stop-Diaphragm
 PSD = Pre-set diaphragm
 FSD = Fully-automatic spring diaphragm
- **)
- with extra-long helical thread for close-up focusing without special accessories, with Flektogon 2.8/35 down to 6³/₄ inches, and with S 4/135 from Jena down to 40 inches.





3. Changing the lens (28) (select automatic on all lenses from Jena): depress the locking lever (30) towards the lens, then turn the lens to the left until the two red dots (23 and 29) are in line, and lift the lens out towards the front. To insert a lens proceed in the reverse sequence: line up the red dots, and turn the lens to the right until it locks. All special-purpose lenses can be used, with focal lengths ranging from the shortest to the longest.

Using the Finder Hood


The reflex image in the Finder Hood (13) of the EXAKTA VX 1000 may be used both for selecting or framing the subject, and also for focusing and checking the depth of field, by provisionally stopping down the lens. Generally, a large enough image for normal viewfinding purposes will be obtained when using the standard ground-glass screen or the Fresnel screen; for critical focusing, however, we recommend the additional use of the Focusing Magnifier. The pivoted Focusing Magnifier (15) will spring into its working position when the Finder Hood is opened, but can be folded back out of the way by operating the handle (16); see also page 4. Refer to page 36 for instructions on the use of the Fresnel screen.

Normally, the EXAKTA VX 1000 is held at chest or shoulder level. When, in addition to the ground-glass screen or the Fresnel screen, the pivoted supplementary Focusing Magnifier (15)

is also used, the camera must be held close to the eye. When taking vertical pictures with the Finder Hood it is possible to shoot at right angles. This is particularly useful for working inconspicuously since the photographer can remain in concealment. (The Penta Prism makes it pos-

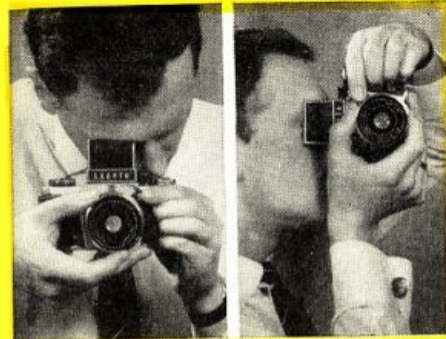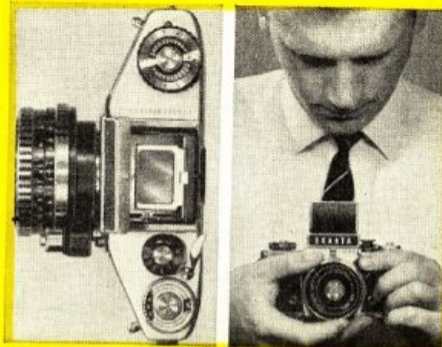

sible to take vertical pictures with a direct line of vision and also provides a laterally-correct and upright viewfinder image.) The image on the ground-glass screen of the Finder Hood (13) can also be observed from below when the camera is held above the head. This will prove

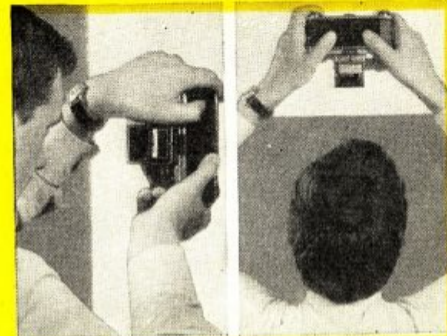

very useful when taking pictures over walls or over the heads of crowds. Users who normally wear spectacles should use their close-up (reading) glasses for focusing with the Finder Hood. For interchanging the Finder Hood, see page 37.

Using the Penta Prism

The Penta Prism serves the same purpose as the Finder Hood, with the exception, that the reflex image on the ground-glass screen will invariably be upright and laterally-correct no matter whether the camera is held horizontally or vertically; this is particularly useful when taking pictures of moving subjects, since the image in the viewfinder will move in the same direction as the subject itself. With very rapidly-moving subjects the camera can thus be "panned" by swinging it gently in the direction of motion of the subject (as for example, with racing cars).

When employing the Penta Prism (45) the camera should always be held at eye level. Viewing the reflex image through the eyepiece (46) may be effected with either eye. For normal upright and horizontal exposures the EXAKTA VX1000 should be held with the right hand and focused with the thumb and index finger. The left hand should give additional support, the left





index finger being used for releasing the shutter. The reverse handling is possible for horizontal exposures: to prevent camera shake when using the EXAKTA VX 1000, press the back of the camera against the forehead. Photographers who normally wear spectacles



should use their distance glasses for focusing with the Penta Prism. Refer to page 36 for instructions on the use of the Fresnel screen. - For fitting and removing the Penta Prism see page 37. An invaluable accessory for use with the Penta Prism is the flexible eyepiece cup:



this is fitted on to the eyepiece (46) of the Penta Prism and shields it from distracting straylight. It is also helpful for spectacle-wearers since vision-correction lenses made by one's optician can be inserted into the revolving mount, making it possible to focus without wearing glasses.

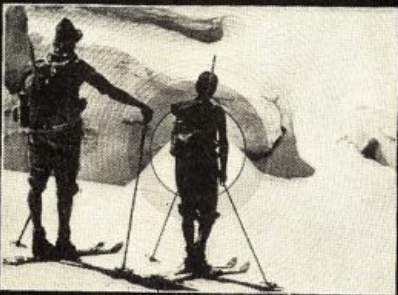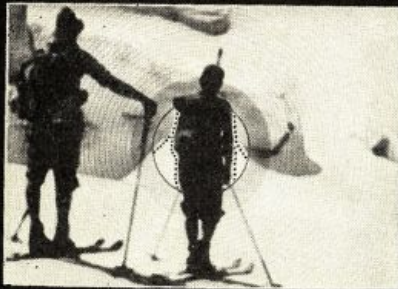

Focusing with the Fresnel screen


The EXAKTA VX 1000 may optionally be supplied with a Fresnel screen. With this screen, focusing is mainly performed using the centrally placed matt ring without the fresnel line structure. To increase the accuracy of focusing, a microprism is centered in this ring. The extra brilliant image visible in this patterned field serves for focusing in the same way as the image on the ground-glass screen, except that with the microprism, incorrect focusing will result in an image which is blurred to a greater degree. The lens will be correctly focused when the image in the microprism is at its sharpest. It is, however, absolutely essential to focus with a large aperture, as with apertures of $f\ 5.6$ and smaller, the image in the microprism field will appear relatively sharp, even with the lens incorrectly focused. This, of course, will lead to unsatisfactory results. For extreme close-ups of magnifications greater than 1:1, and photomicrography, the microprism cannot be used.

Interchanging of the focusing systems

The focusing systems of the EXAKTA VX 1000 (Finder Hood, Penta Prism, Lens Magnifier, see page 48) are interchangeable. The Finder Hood (13) must be closed when the Finder Hood insert is being removed from the camera.

When any of the viewfinder inserts are being removed from the camera, the viewfinder-retaining catch (7) must be pressed downwards, and the Finder Hood, Penta Prism or Lens Magnifier withdrawn upwards without tilting. On replacing a viewfinder unit, it must be inserted squarely and vertically, and be pressed downwards until it clicks into position. Never use force.



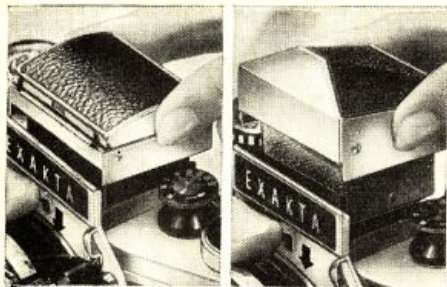

Exchanging the focusing screen or Fresnel screen

The focusing screen or the Fresnel screen of the viewfinder systems of the EXAKTA VX1000 are interchangeable, so that, if desired, the ground-glass screen, the Fresnel screen, the ground-glass screen with field framing, one of the special focusing screens or the flat ground-glass screen (see page 48) may be used. When fitting or removing a focusing screen or Fresnel screen from the Finder Hood insert, the Finder Hood (13) must be closed.


Remove the viewfinder insert as described on page 37. The focusing screen or Fresnel screen should be gripped by the long sides, and withdrawn from the viewfinder. – To refit the focusing screen, Fresnel screen or flat ground-glass screen it should again be held by the long sides and pushed in between the securing springs of the viewfinder system. Never touch the matt surface of any screen. (With the Finder Hood insert, the Finder Hood must first be closed.)



Changing the film


If the frame counter (6) has been correctly set when loading the film, then after the 20th or 36th exposure, the number 36 will appear in the frame-counter window. It may be possible to expose one or two further frames before the film can no longer be transported.

Should the rapid-wind lever (8) stop before reaching the end of its forward travel, then depress the rewind-release button (9), at the same time cocking the rapid-wind lever (8) fully. It should now return to its rest position. When using a take-up spool (32), the film should now be rewound back into its cassette.

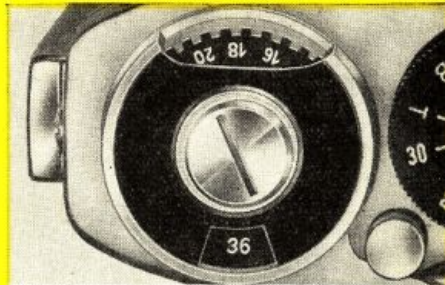





1. Depress the rewind button (9) and secure the rapid-wind lever (8) with a light pressure in the slot of the rewind button, so that it stays in the rewinding position. (The next time that the rapid-wind lever (8) is wound, the rewind button (9) will spring back into its normal position, and the camera would then again be ready for forward transportation of the film.)

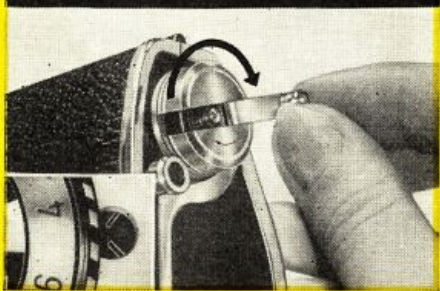

2. Hold the camera in the left hand. Swing out the rewind crank, and with the right hand turn it evenly and slowly in a clockwise direction, until it is felt that it turns more easily. The film has now been rewound. (If the film is rewound at too great a speed, static electricity will cause discharge marks to appear on the negatives.) If the film is being correctly rewound, the indicator disc (20) will show this by revolving also.

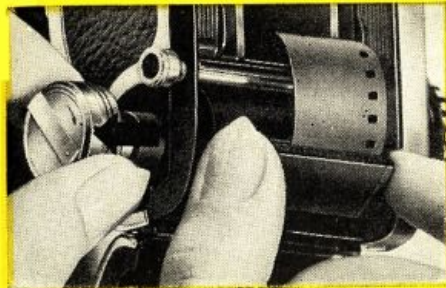

3. Open the camera back. Withdraw the rewind crank (39) by means of its knob, and remove the cassette of exposed film from the camera. Depress the knob on the rewind crank to push it back into the camera. When an empty film cassette is used in place of a take-up spool, rewinding is not necessary. As soon as the end of the film is reached (when the rapid-wind lever (8) can no longer be operated, see page 39), cut off the film on the feed side of the film gate (36) by means of the built-in film-

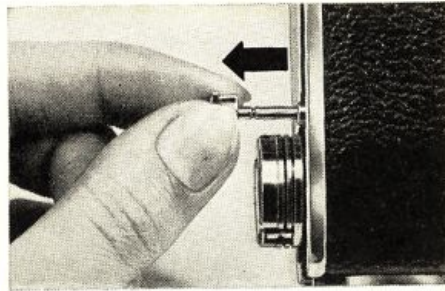

cutting knife (37): Withdraw the knob (38) about $1\frac{3}{4}$ inches from the camera body. Then press the knob (38), returning it to its rest position. Wind on, and expose two blank frames, in order to draw the end of the film across into the take-up cassette. The film-cutting knife (37) should also be employed in the manner described above whenever it is desired to remove a take-up spool containing a partially exposed film from the camera.




Flash Photography

The EXAKTA VX 1000 has three connections for flash synchronizing: Outlet X (12) for open flash technique with electronic flash units and flashbulbs. Outlet FP (22) and F (31) are for the use of flashbulbs. The synchronizing cord of standard and electronic flashguns should be connected to the appropriate socket as indicated in the table. The shutter must always be tensioned before connecting a flashgun. Should a flashbulb fail to fire, e. g. through poor contact in the circuit, the shutter must be in the released position before the bulb is removed. Do not insert a new bulb until the shutter has been re-tensioned.

Use of electronic flash units (open flash technique)


The synchronizing cord should be connected to the X contact (12) and the shutter set to $\frac{1}{60}$ second or slower. When using electronic flashguns without storage condensers, designed for mains operation only, the shutter must be set to $\frac{1}{8}$ second. The effective exposure time, however, is the duration of the flash, and not the time that the shutter remains open.

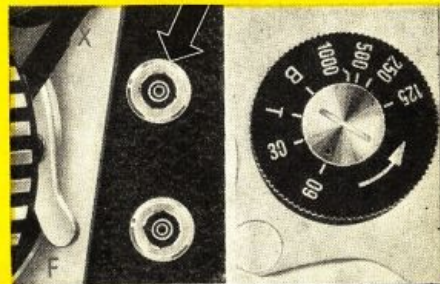

Use of long-burning flashbulbs (full synchronization)


Connect the cable from the flashgun to the FP contact (22) and select the shutter speed according to the table. With full synchronization, this will be the effective exposure time.

| Shutter-speed setting | Osram XM 6 B | Philips PF 6 B | PF 45 B | PF 45 |
|-----------------------|-------------------------------|----------------|---------|-------|
| | Guide numbers for 40 ASA film | | | |
| $\frac{1}{1000}$ sec. | 19 | 19 | 22 | 32 |
| $\frac{1}{500}$ sec. | 28 | 28 | 32 | 45 |
| $\frac{1}{250}$ sec. | 38 | 38 | 45 | 66 |
| $\frac{1}{125}$ sec. | 55 | 55 | 63 | 99 |
| $\frac{1}{60}$ sec. | 80 | 80 | 86 | 138 |

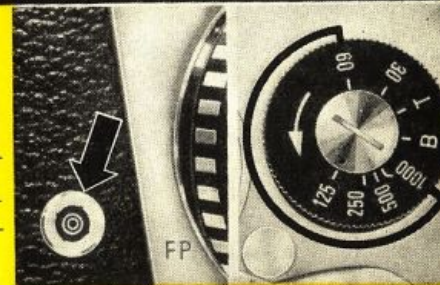


Use of fast-burning flashbulbs (open flash technique)

Connect the cable of the flashgun to the F contact (31) and set the shutter to $\frac{1}{30}$ second. The effective exposure time will be determined by the duration of the flash, and not by the shutter speed.

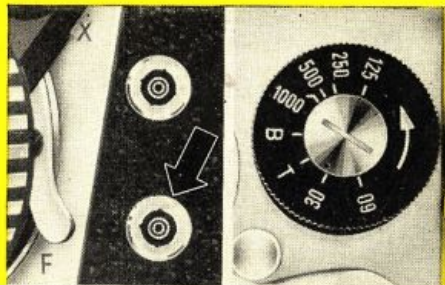

Use of all types of flashbulbs (open flash technique)

Connect the cable of the flashgun to the X contact, and set the shutter to $\frac{1}{8}$ second or longer. The effective exposure time will be determined by the duration of the flash, and not by the shutter speed.

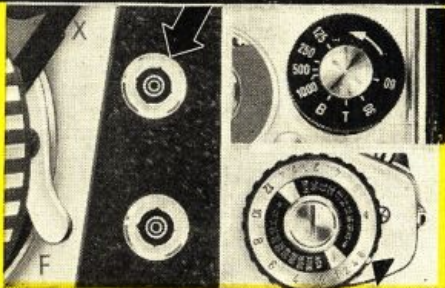

The following data apply to some of the well-known flashbulbs available

| Osram flashbulbs | | | Philips Photoflux flashbulbs | | | Narva flashbulbs | | |
|------------------|---------------------|---------------------|------------------------------|---------------------|---------------------|------------------|---------------------|---------------------------------|
| Type | Guide No. 40 ASA | Flash duration | Type | Guide No. 40 ASA | Flash duration | Type | Guide No. 40 ASA | Flash duration |
| AG 3 B | 86 | $\frac{1}{80}$ sec. | AG 3 B | 92 | $\frac{1}{80}$ sec. | X 1 (capless) | 59 | approx. $\frac{1}{125}$ sec. |
| XM 1 B | 86 | $\frac{1}{90}$ sec. | PF 1 B | 92 | $\frac{1}{90}$ sec. | | | |
| XM 5 B | 132 | $\frac{1}{70}$ sec. | PF 5 B | 132 | $\frac{1}{70}$ sec. | | | |




The following data apply to some of the well-known flashbulbs available

| Osram flashbulbs | | | Philips Photoflux flashbulbs | | | Narva flashbulbs | | |
|------------------|---------------------|---------------------|------------------------------|---------------------|---------------------|------------------|---------------------|---------------------------------|
| Type | Guide No. 40 ASA | Flash duration | Type | Guide No. 40 ASA | Flash duration | Type | Guide No. 40 ASA | Flash duration |
| AG 3 B | 86 | $\frac{1}{80}$ sec. | AG 3 B | 92 | $\frac{1}{80}$ sec. | X 1 (capless) | 59 | approx. $\frac{1}{125}$ sec. |
| XM 1 B | 86 | $\frac{1}{90}$ sec. | PF 1 B | 92 | $\frac{1}{90}$ sec. | | | |
| XM 5 B | 132 | $\frac{1}{70}$ sec. | PF 5 B | 132 | $\frac{1}{70}$ sec. | | | |
| XM 6 B | 115 | $\frac{1}{33}$ sec. | PF 6 B | 118 | $\frac{1}{33}$ sec. | | | |
| | | | PF 45 B | 145 | $\frac{1}{33}$ sec. | | | |
| | | | PF 60 B | 171 | $\frac{1}{70}$ sec. | | | |
| | | | PF 100B | 211 | $\frac{1}{80}$ sec. | | | |
| | | | PF 45 | 198 | $\frac{1}{33}$ sec. | | | |
| | | | PF 60 | 244 | $\frac{1}{70}$ sec. | | | |
| | | | PF 100 | 293 | $\frac{1}{68}$ sec. | | | |

Care of the camera and lenses

Always keep the camera in its ever-ready case with the lens (or lenscap) and viewfinder unit in position; alternatively it may be kept wrapped in a fluff-free cloth. All parts which are easily accessible from the outside should be kept clean and dusted with a soft brush. This applies particularly to the film-guide runners (35), the film-wind sprocket (34), the film chambers (33 and 41) and also the camera back (42) including the pressure plate (43). The reflex mirror should only be dusted when absolutely necessary, using a clean soft brush without applying any pressure; do not allow the brush to touch the lightly-greased metal surround of the mirror. Protect the camera against moisture, dust, wind-borne sand, etc. Under no circumstances allow the camera to be pointed at the sun unless the lens is covered by a lenscap! By doing so, the lens would act as a magnifier, focusing the

sun's rays sharply on the material of the focal-plane shutter blinds and causing them to be burned. Never touch the glass surfaces of the lenses, the focusing magnifier (or the eyepiece of the Penta Prism or the mirror) with the fingers. These glass surfaces should be cleaned when necessary only with an extremely soft piece of wash-leather or a soft, fluff-free linen cloth. It is highly inadvisable to attempt to interfere with the mechanism of the camera; repairs should be undertaken only by authorized servicing agencies.

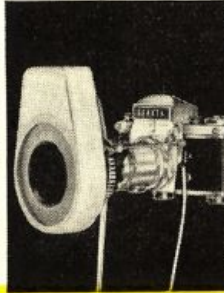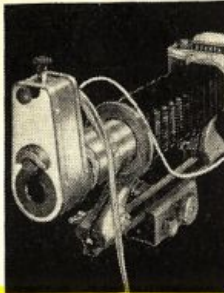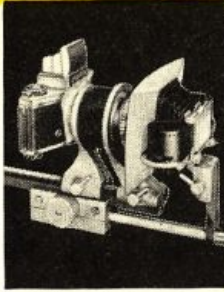

Accessories

Accessories increase the versatility of the EXAKTA VX 1000 and are for some applications indispensable. The following are available:

Finder Hood
Penta Prism
Fresnel Screen with Microprism grid
Ground-glass Screen with Field Framing
Eyepiece cup for Penta Prism
Ever-Ready Case
Lens Hood with screw-in mount
Giant release button, to enlarge the release button
Accessory shoe
Polarisation filter
Special locking knob (for Domiplan 2.8/50 lens)
Bayonet rings and tubes, as well as Two-in-one ring, for close-ups
Miniature Bellows Attachment
Ihagee Autocouple Extension Release, for close-ups

Ihagee "Vielzweck" (Multi-Purpose) equipment for close-ups, reproductions and macrophotography, etc., consisting of the following parts:

Swing Angle Attachment
Large Bellows Attachment
Transparency Copying Attachment
Copying Stand and Repro Unit (with Lighting equipment, if required)
T 2.8/50 Special lens from Jena, in sunk mount
Lens Reversal Ring
Adapter Ring for using photomicrographic lenses
Lens Magnifier insert with Top Lens
Flat Ground-glass Screen
Special Focusing Screens
Ihagee Macro-Micro Photometer
Ihagee Ringflash Units RB 1 and RB 2
Ihagee Kolpofot
Ihagee Endoscope Attachment and Over-running Switch Unit
Ihagee Spectroscope Adapter Ring
Ihagee Adapter for Astrophotography
Microscope Attachment

Should you want further information, we shall be pleased to send you any special leaflets. Kindly let us know your particular interests.

We would also recommend the following book "EXAKTA Manual" by Werner Wurst (Fountain Press, London). Available from photographic dealers.

The illustrations in this manual may differ in certain details from the actual appearance of the camera and its accessories.

Original

EXA
EXAKTA

Dresden

IHAGEE KAMERAWERK AG in Verwaltung - 8016 DRESDEN

Form 36/10/6807

III-6-15 2273-68 - J1 2742-68 **Engl.**