


EXAKTA

Varex II b

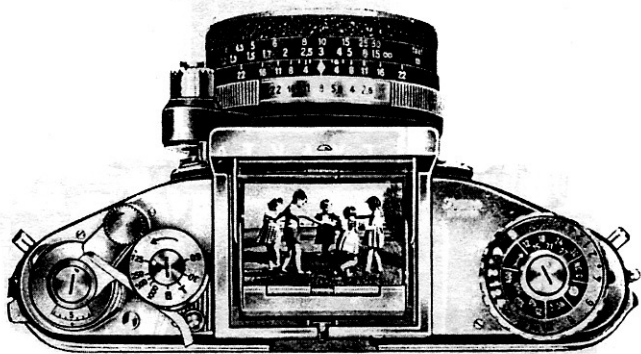

Supplementary
instructions



EXAKTA Varex II b

This latest development of the EXAKTA Varex offers a number of improvements in handling, with the result that its operation differs from that of the Model II a in the following respects:

1. Shutter

The shutter-speed sequence has been converted to the now internationally-accepted geometrical series. Speeds from $1/1000$ to $1/30$ sec are selected with the small shutter-speed setting knob (10), also

the B and T time-exposure settings. The slow shutter speeds from $\frac{1}{8}$ to 12 sec are selected by means of the large shutter-speed setting knob (18) which is also used for delayed-action exposures from $\frac{1}{4}$ to 6 sec. The smaller figures on the large speed-setting knob (18) represent fractions of seconds, the larger figures whole seconds.

Instruction manual, page 4, right-hand side: the last sentence should be amended as follows: Lift the outer ring of the slow shutter-speed setting ring (18), turn it until the red mark is opposite the desired black shutter-speed value, then let the ring spring back.

2. Exchanging the viewfinder system

Catch (11) is omitted.

Instruction manual, page 14, second paragraph: Delete the advice to „Press catch (11) downwards“; the Finder-Hood is merely lifted out smoothly by pulling it upwards. The same applies to other viewfinder systems.

3. Loading and rewinding the film

In place of the rewind knob (41) with pressure washer (42), a highly practical rewind crank with pull-out knob is now fitted.

Instruction manual, page 18, right: the beginning of the second paragraph should be altered as follows: Open the camera back, pull out the rewind crank by means of the knob. Insert the film cassette into the cassette chamber (43). Swing the rewind crank outwards and push it back into the camera body by depressing the knob; twist the knob gently in the direction of the arrow whilst doing so to make the dog of the rewind crank (previously the dog (40) of the rewind knob) engage with the bar in the end of the cassette core. Then guide the film over the film guide runners (36) and attach it to the take-up spool (32) as described in the instruction manual.

Instruction manual, page 20, third paragraph: The film-type reminder ring (19) has been

replaced by a film-type reminder disc on the large shutter-speed setting knob (18). The film speed values and letters remain as before, but the operating instructions given on page 21 should be amended as follows: Turn the film-type reminder disc in the direction of the arrow until the desired data is opposite the black triangle on the shutter-speed setting knob (18).

Instruction manual, page 22: the last sentence of the left-hand paragraph should be altered as follows: Grasp the camera with the left hand. Maintain continuous pressure on pressure-pin (9). Swing out rewind crank and turn it with the right

hand at a uniform, not excessively rapid speed in the direction of the arrow.

Instruction manual, page 22, right: the third paragraph should be amended thus: Now open the camera back, pull out the rewind crank by means of its knob, and remove the cassette containing the rewound film from the camera. Depress the knob of the rewind crank once again to push it back into the camera.

4. Flash

Instruction manual, page 23: the "M" flash contact is marked "FP" on Model II b.

I H A G E E K A M E R A W E R K A G · D R E S D E N A 1 6