

## ADJUSTING THE HYPONAR

To check for vertical alignment hold the scribed plastic at the film plane with the shutter open on 'T', with the camera on a steady support and focused on some object such as a printed page. With a magnifier observe whether the same point in the image of the object is at the line in each of the pictures of the pair. If not, remove the Hyponar, loosen the 3 screws 'A' and rotate the lens plate slightly. Keep trying until you have both images at the same level. Be sure to hold the edge of the plastic against one edge of the film track.

Then sheck whether the dividing septum is straight and centered. If it is not loosen the two screws 'B' and straighten it, while it is one the camera. If it is not centered gently bend it one way or the other with your fingers.

For a more snug fit on your camera insert a screwdriver blade in slot 'C' and bend out VERY SLIGHTLY.