

Attention!

(Supplement to page 24-26 of the instruction for use: The Ihagee Vielzweck)

Recently, a Transparency Copying Screen (Fig. 26a page 26) as shown in Figs. 23 - 26 is being supplied for the transparency copying device in place of the light-protection bellows (12/2). The screen is fixed to the projections (12/8) on the picture gate (12/6) and protects the camera from the rays emanating from the light source, thus sheltering the eyes while focusing. We advise setting up the Transparency Copying Equipment in a somewhat darkened room in order to keep any stray light away from the picture gate. Figs. 24-26 apply also to the new Transparency Copying Screen.

*Fig. 26a:
Copying stand with bellows attachment and
transparency copy equipment; suitable horizontal
position*

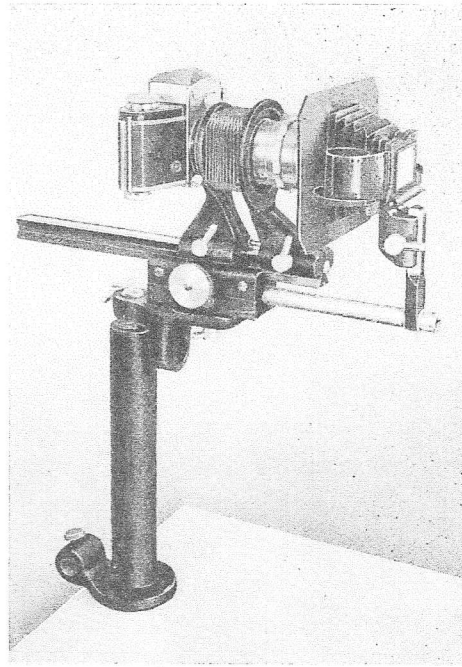


Fig. 26a