THE V.P. 4 × 6.5 cm

Exakta



Reflex Camera of Universal Usefulness

Ihagee≡

EXAKTA

Reflex Cameras



Precision and beautiful appearance combined with the finest design make Exakta cameras the choice of discriminating amateurs who refuse to own anything but the best. Trapezoidal in shape, covered with the finest leather with chromium trimming, the appearance is in keeping with its quality.

The Exakta is a reflecting camera in which the visual image is formed by the taking lens, eliminating all errors of parallax. The focusing screen has a self erecting light hood which is fitted with a focusing magnifier for fine focusing. A reflecting panel is set in the hood so that the camera may be focused at eye level if desired, or an open frame sight used for action follow shots.

Film size No. 127 is used, the negatives being full vest pocket size. This provides a negative amply large for flawless enlarging with a camera comparable in size to those making the smallest negatives. The eight exposure roll eliminates the necessity for making a burdensome number of exposures before development, yet provides sufficient sensitive material for ordinary purposes. The mechanical design is such that double exposures are impossible.




INDEX

| Distributors Back Page | Э |
|--------------------------------|---|
| Eveready Cases | 7 |
| Exakta B | 2 |
| Exakta Book | 3 |
| Exakta, Jr. | 2 |
| Extension Tubes | , |
| Filters | • |
| Finger Release Knob | 3 |
| Focusing Hood Extension | 3 |
| Focusing Pin | 3 |
| Interchangeable Lenses 4-5 | 5 |
| Lens Shades | 5 |
| Luminax B Enlarger | 7 |
| Microscope Adapter | 3 |
| Neck Strap | , |
| Night Exakta | 2 |
| Plateback Exakta | 3 |
| Projection Luminax Enlarger | 7 |
| Reproduction Stand | 3 |
| Screw Button for Eveready Case | , |
| Supplementary Lenses | • |


GET WHAT YOU SEE!

THE PROBLEM OF PARALLAX



THIS IS PARALLAX. No matter how carefully matched or how close together the finder and taking lenses may be, there is a difference in their fields of view. The finder cannot show you exactly what you are taking, so you get pictures with heads missing or feet cut off.

NO PARALLAX HERE. In the Exakta the image seen by the eye is the actual photographic image, so that you always see just exactly what you will get before you make the exposure.



THE EXAKTA HAS NO PARALLAX

EXAKTA JUNIOR

EXAKTA MODEL B

Equipped with self capping focal plane shutter having automatic speeds from 12 seconds to 1/1000 second by direct release and from 6 seconds to 1/1000 second by delayed action release.

BLACK

| B-8150-BR | With | Exaktar F/3.5—7.5 cm \$ 85. | 00 |
|-----------|------|--------------------------------|----|
| B-8150-PR | With | Primotar F/3.5-7.5 cm 95. | 00 |
| B-8150-Q | With | Zeiss Tessar F/3.5—7.5 cm | 50 |
| B-8150-E | With | Zeiss Tessar F/2.8—7.5 cm 117. | 50 |

CHROME


| CHR-B-8150-BR | With Exaktar F/3.5-7.5 cm | 95.00 |
|---------------|--------------------------------|--------|
| CHR-B-8150-PR | With Primotar F/3.5-7.5 cm | 105.00 |
| CHR-B-8150-Q | With Zeiss Tessar F/3.5—7.5 cm | 112.50 |
| | With Zeiss Tessar F/2.8-7.5 cm | |

NIGHT EXAKTA—Model B

| B-8150-LR W | Vith Zeiss | Biotar F/2- | –8 cm | \$250.00 |
|--------------|------------|-------------|---------|-----------|
| B-8150-PL W | Vith Meye | r Primoplan | F/1.9—8 | cm 170.00 |
| B-8150-O., V | Vith Schne | ider Xenon | F/28 cm | n 170.00 |

CHROME

| CHR-B-8150-LR | With | Zeiss | Biotar F. | /2-8 | cm | 260.00 |
|---------------|------|-------|-----------|---------|---------|--------|
| CHR-B-8150-PL | With | Meyer | Primopla | an F/1. | 9—8 cm. | 180.00 |
| CHR-B-8150-O | With | Schne | eider Xen | on F/2 | 8 cm. | 180.00 |

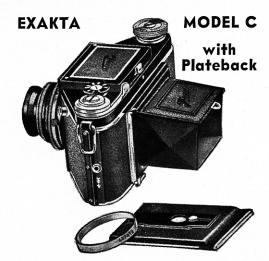

This is the same as the Exakta Model B except that it is equipped with a special back permitting the use of glass plates or cut film as well as rollfilm. (The reflex focusing cannot be used with the plateback, a special ground glass panel being provided for focusing.)

| C-8150-BR With | Exaktar F/3.5—7.5 cm | \$ 97.00 |
|----------------|--------------------------------|----------|
| C-8150-PR With | Primotar F/3.5—7.5 cm | 107.00 |
| C-8150-Q With | Zeiss Tessar F/3.5—7.5 cm | 114.50 |
| C-8150-E With | Zeiss Tessar F/2.8—7.5 cm | 129.50 |
| | CHROME | |
| CHR-C-8150-BR | With Exaktar F/3.5-7.5 cm | \$107.00 |
| CHR-C-8150-PR | With Primotar F/3.5-7.5 cm | 117.00 |
| CHR-C-8150-Q | With Zeiss Tessar F/3.5—7.5 cm | 124.50 |
| CHR-C-8150-E | With Zeiss Tessar F/2.8—7.5 cm | 139.50 |
| | | |

Night Exaktas cannot be supplied with the plateback.

Existing Exaktas may be converted to the plateback model at the factory only by returning to Dresden, through the Amer. Distributor. Delivery time 10 weeks, cost \$40.00.

Accessories for Plateback Exaktas

| 7141—Extra p | lateholders | 5 .5 | 0 |
|---------------|-------------|----------|---|
| 7230—Filmpacl | k adapter | 2.2 | 5 |

FOCUSING PIN

FINGER RELEASE KNOB

LEATHER FOCUSING HOOD EXTENSION

To fit over the metal focusing hood to completely block extraneous light.

| 7653—Regular | tocusing | hood ex | rtensio | n | 1.50 |
|--------------|-----------|---------|---------|-------|----------|
| 9657—12 cm. | extension | fitted | with | large | |
| magnifier | | | | | 4.00 |

INTERCHANGEARLE EXTRA LENSES

These lenses fit the socket of the Exakta Model B interchangeably with the standard lens, giving a greatly increased scope of usefulness to the camera.

With the Tele lenses of 18 and 25 cm. focal length some vignetting appears on the narrow sides of the picture, which, however, does not amount to much, as in a tele-exposure the main subject is in the centre of the picture.

Seven Exakta Pictures taken from the same position





STANDARD LENSFoc. length 7.5 cm., View-angle 55°



9413—Ihagee Anastigmat F/4.5, 10.5—11 cm...... 28.50
Foc. length 10.5—11 cm., View-angle 38°



1411—Tele Tessar F/6.3—12 cm, with finder mask \$92.50 F/6.3, Foc. length 12 cm., View-angle 34°



9412—Tele Megor F/5.5—15 cm, with finder mask 9417—Leather case for Tele Megor.....

65.00 2.00

Foc. length 15 cm., View-angle 28°





9416—Tele Tessar F/6.3—25 cm. with finder mask 165.00 Foc. length 25 cm., View-angle 17°

LENS SHADES

A lens shade is essential when working against the light, but practically every outdoor shot will be of better quality if a sunshade is used regularly.

| 9654-JR | -32mm, for Junior Exakta F/4.5 or F/3.5\$ | 2.00 |
|---------|--|------|
| 9654-B | -32mm. for Exaktar F/3.5 or Primotar F/35 | 2.00 |
| 9654-Q | -28.5mm, for Tessar F/3.5 | 2.00 |
| 9654-E | -37mm. for Tessar F/2.8 | 2.00 |
| 9656-LR | -51mm. slip-on, for Biotar F/2, or Xenon F/2 | 3.00 |

(Note: Primoplan lenses are furnished with screw-on lens shade)

FILTERS

Yellow (Y) Red (R) Blue (B) Green (G)

(Yellow filters in each size are supplied in three grades, light, medium, and dark. When ordering state density desired, "I", "m", or "d".)

TABLE OF FILTER FACTORS

| Filter · | Y.L. | Y.M. | Y.D. | Green | Blue | Red |
|-----------|------|------|------|-------|------|-----|
| Ortho.x | 2 | 4 | 6 | _ | 11/2 | _ |
| Panchro.x | 11/2 | 2 | 3 | 4 | 11/2 | - 8 |

| 9651-JR | -32mm. for Junior Exakta F/4.5 or F/3.5\$ | 3.00 |
|---------|---|------|
| 9651-B | -32mm. for Exaktar 3.5 or Primotar F/3.5 | 3.00 |
| 9651-Q | -28.5mm. for Tessar F/3.5 | 3.00 |
| 9652-E | -37mm. for Tessar F/2.8 | 4.00 |
| 9655-LR | -51mm. slip-on, for Biotar F/2 or Xenon F/2 | 6.00 |
| 9655-PL | -51mm, screw-in mount for Primoplan F/1.9 | 6.00 |

SUPPLEMENTARY LENSES

SUPPLEMENTARY LENSES FOR CLOSEUP

| 3641-JR | -32mm. for Junior Exakta F/4.5 or F/3.5\$ | 3.00 |
|---------|---|------|
| 3641-B | -32mm. for Exaktar 3.5 or Primotar F/3.5 | 3.00 |
| 3641-Q | -28.5mm. for Tessar 3.5 | 3.00 |
| 3642-E | —37mm. for Tessar 2.8 | 4.00 |
| 3643-LR | —51mm. slip-on, for Biotar F/2 or Xenon F/2 | 5.00 |
| 3643-PL | -51mm. screw-in mount for Primoplan F/1.9 | 5.00 |

SUPPLEMENTARY LENSES FOR DISTANT VIEWS

(including black extension tube to be inserted between spiral mount and lens barrel. Chrome tubes can be furnished at 50 cents additional.)

[6]

EXTENSION TURES



B. A. Extension tubes serve to increase the distance between the lens and the focal plane, thus making it possible to make photographs of objects extremely near the camera, using the regular camera lens. Both tubes may be used together to obtain natural size images.

Close-ups with Exakta Extension Tubes

(Explained with respect to 2 lenses.) The table shows how closely one may approach the object. The two measurements indicate the focussing distances, measured from the object to the plane of the film. The greater measurement requires focussing by focussing mount to infinity, the smaller one focussing to shortest distance (i.e., the focussing mount is fully turned out).

| Focal | Normal | W. Tube | W. Tube | W. Tubes |
|---------|-----------|------------|---------|----------|
| Length | Lens Only | | B | A & B |
| 7.5 cm. | ∞ 34'' | 20—16 | 13¾—12¾ | 12—11¾ |
| 8 cm. | ∞ 36'' | Not Usable | 15—13½ | 13¼—12¾ |

| Focal | W. Suppl. Lens | With St | plementary | Lens and |
|---------|----------------|------------|------------|-------------|
| Length | For Close-Ups | | Tube B | Tubes A & B |
| 7.5 cm. | 20—15 | 12—11 | 103/810 | 101/8-97/8 |
| 8 cm. | 23—16 | Not Usable | 12-111/2 | 111/4-11 |

EVEREADY CARRYING CASE

This case provides complete protection to the camera while keeping it ready for instant use.

| 7335 —For all Exaktas except Night and Plate | 7.50 |
|--|------|
| 7335LR—For Night Exaktas | 7.50 |
| 7335-C—For Plateback Exaktas | 7.50 |

MISCELLANEOUS ACCESSORIES

| Neck | Strap, | plea | ated | leathe | r cord | with | carbines | 1.75 |
|-------|--------|------|------|--------|--------|------|----------|------|
| Lens | Flange | for | Tess | ar 2.8 | Lens | | | 1.50 |
| Screw | Button | for | Ever | eady (| Case | | | .50 |

[7]



EXAKTA MICROSCOPE ADAPTER

FOR PHOTOMICROGRAPHS the Exakta is an ideal instrument. Here, too, the focusing by means of a mirror proves to be the most perfect construction for photographic cameras. The Exakta is adapted to the microscope by means of the

This adapter fits all standard 25mm. diameter microscope drawtubes and can be turned over, thus permitting the interchange of the oculars of the microscope and to change the scale of enlargement.

8925—Exakta Micro Adapter, in case\$25.00

(Exakta Micro Adapter for 33 mm. diameter draw-tube supplied at same price. Unless otherwise stated, 25 mm. model will be supplied.)

EXAKTA REPRODUCTION STAND

to facilitate reproduction work by ensuring exact parallelism between object and camera. The baseboard serves also as object stage for close-ups. A friction drive permits rapid adjustment of the Exakta to the required distance. Exactly above the center of the baseboard the camera is screwed to a carrier arm which can also be turned up vertically if a greater distance is required.

The use of this frame is possible only with Exakta extension tubes. By means of the Tube A = $1\frac{1}{2}$ cm. an area up to abt. 14×23 cm. can be reproduced.

8810—Exakta Reproduction Stand\$35.00

EXAKTA BOOK

A new hand book on the Exakta, for up-to-date photographers, by Gerhard Isert, translated by P. C. Smethurst, now ready.

In addition to a description of the special features and technical equipment of the Exakta, the author also gives a very interesting dissertation upon the technics of photography, pictorial points of view, developing, printing and enlarging.

THE EXAKTA BOOK \$1.25

When corresponding with the Service Department of the distributors about uses of the Exakta, Repairs, Accessories, etc., always state Camera Number, Kind of Lens and Lens Number.

V.P. LUMIMAX ENLARGERS

FOR USE WITH THE VEST-POCKET EXAKTA CAMERA LENS



The Lumimax enlargers are of seasoned wood. leather covered and white enamelled inside. The design is such that they may be used vertically or horizontally

| may be use | u verncan | ly of horizonian | ٠. |
|------------|-------------|-------------------------------------|-------|
| 5950-B | Lumimax B | , with condenser\$ | 17.75 |
| W-5202-G | Wooden St | tand | 4.00 |
| M-5202-G | Metal Stand | d | 7.50 |
| 6500 | Baseboard | 15x16 ¹ / ₂ " | 3.25 |
| | | | |

COMPLETE V.P. LUMIMAX B With Wood Stand\$25.00 With Metal Stand 28.50

5611 Insert Glass Masks for 3x4, 2.4x3.6 and 4x6.5 cm. 1.80

PROJECTION LUMIMAX ENLARGERS

For Negatives up to 6x6 cm. (21/4x21/4")

The Projection Lumimax is a metal enlarger. A metal lamphouse is supported by a metal post. The lamphouse position is controlled by means of a hand wheel while focusing is accomplished by means of a large disc easily grasped. The lamphouse may be turned to the horizontal position for enlargements of greater scope than permitted by the vertical position.

For enlarging, use 100 Watt opal lamps, for projection, 100 Watt clear projection bulbs and the lamp house extension.



The Baseboard is of Hard Wood, 13x15". Used as projector with 7.5 Exakta Lens, a screen picture of 3'x4' is obtained at 6' distance.

Projection enlarger Lumimax with stand, baseboard, condenser and 4x6.5 cm. glass mask without lamp.

| 9700—Without | lens, but with mount | for Exakta lens\$60.00 |
|--------------|----------------------|---------------------------|
| 9700-PR-with | Primotar F/3.5-7.5 | cm. with iris 80.00 |
| | | F/4.5—7.5 cm 70.00 |
| 9700-P —with | lhagee Anastigmat | F/3.5—7.5 cm 77.50 |

ACCESSORIES FOR PROJ. LUMIMAX

| Lamphouse extension for even screen illumination\$4 Extra glass masks, 24x36 mm., 3x4 cm., 4.5x6 cm., | 1.50 |
|--|------|
| V.P., or 6x6 cm., in wooden containers, each 1 | 1.80 |
| 9736—Sliding lantern slide carrier, when using enlarger as a lantern slide projector, 4.5x6 cm. and 5x5 | |
| cm., each 1 | 1.70 |
| 9735—Glass pressure frame for single films | .50 |
| Extension tube for reducing 6x6 negatives to 5x5 cm. | |
| lantern slides, applied between enlarger and lens 6 | 5.00 |
| Universal paper holder for the enlarger. Bookform | |
| with sliding marginal masks. Up to 8x10" | 7.00 |

[8]

V.P. EXAKTA, for 4x6.5 cm. film

KINE EXAKTA, for 35 mm. film EXAKTA ACCESSORIES and EXAKTA ENLARGERS

Manufactured by
IHAGEE KAMERAWERK, DRESDEN

Exclusive U. S. A. Importers

Eastern Distribution

PHOTO MARKETING CORP.

10 West 33rd Street, New York, N. Y.

Western Distribution

BELL & HOWELL CO.

Arizona, California, Colorado, Idaho, Montana, New Mexico, Nevada, Oregon, Utah, Washington, Wyoming

716 North La Brea Ave., Los Angeles, Calif.

(ansas, Nebraska, North Dakota, Oklahoma and South Dakota
1901 Larchmont Ave., Chicago, III.

SOLD BY: